


How to Measure

a FITtoFRAME Honeycomb Pleated Blind

Step 1 -

Measure the width and drop of the visible glass at the top, middle and bottom area of each window where the glass meets the rubber bead. Order the smallest of the three measurements

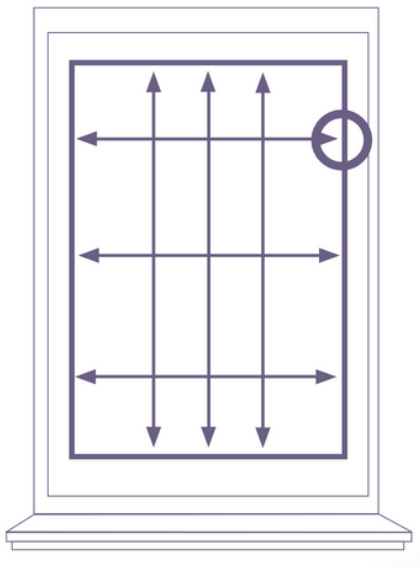

Step 2 -

Check the distance between the edge of the beading and any obstructions i.e. window handles. The handle should be at least 35mm from the depth of the window glass.



Minimum & Maximum Sizes

Minimum Width:	200mm
Maximum Width:	1500mm
Minimum Drop:	150mm
Maximum Drop:	2300mm
Maximum Area:	3m ²

Disclaimer: Maximum width of 1500mm only available up to a maximum drop of 2000mm. Maximum drop of 2300mm only available up to a maximum width of 1300mm.

Need help?

Our customer service team is here to help! Call 01205 601115 or email sales@directorderblinds.co.uk

Scan here to
watch our
measuring
video.

